

T.I. no.: 2020 - 06 Updated: -	Topic: SC Club operating system version BSP40
---	--

Date: 25.02.2020	Priority	Need for action
Affected machines: SC Club	High	As soon as possible
From serial number: -	X Medium	X On next visit to the machine
As of date: Immediately	Low	FYI only

IMPROVEMENTS

Automatic Daylight Saving Time (DST)

- With the new BSP version, the global time zone settings have been updated.

Display/function for external mouse

- If an external mouse is connected to the USB port of the front panel, the new BSP version now allows the mouse pointer to be used over the entire screen area of the front panel.
- Until now, the usable area for the mouse pointer was limited to the bottom part of the screen.

TECHNICIAN INFORMATION


The operating system update of the SC Club with the USB stick is carried out automatically, after the Machine ON step – i.e. while the machine is booting.

The new operating system software was tested during an extensive internal approval test and in a field test. For machines in the field, we recommend checking the operating system software version on the front panel during the next scheduled customer visit and, if necessary, updating to version BSP40. Please observe the following instructions for checking and updating the operating system software.

Checking the operating system software

UNDER


Info – Service: Checking current BSP version

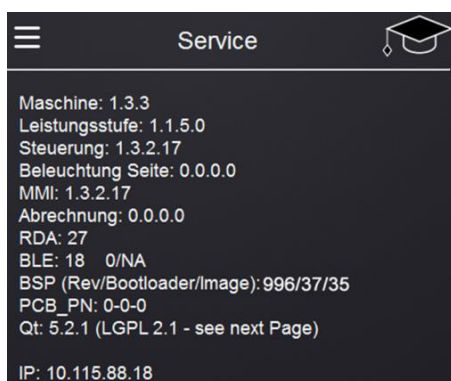

The last number shows the version of the operating system software (BSP35 in the example).

Checking the operating system software

1. Copy the self-extracting zip file 1120_BSP_40.exe to a USB stick and unpack it by double-clicking directly on the USB stick drive.
2. A new folder with the necessary files is created on the USB memory stick or the existing folders/files are overwritten.
3. Switch off the machine.
4. Plug the USB stick into the machine.
5. Switch on the machine.
6. After a short time, the "Update available" message appears; confirm with "YES". The update starts and takes about 1 minute.

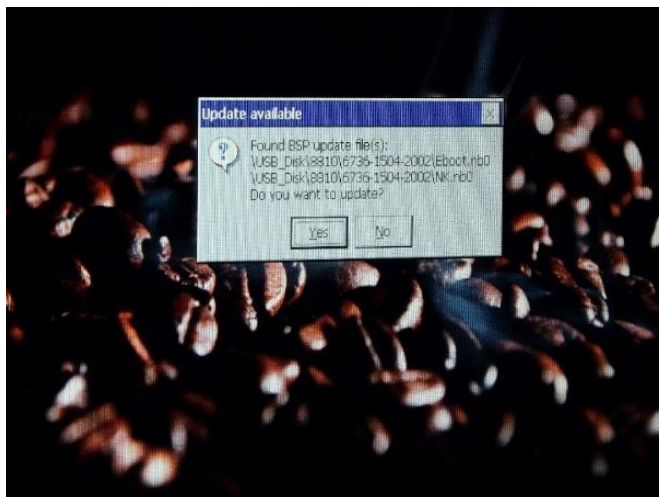


Start update BS with [YES].

7. DO NOT switch off the machine and DO NOT unplug the USB stick during the update process.



8. After a successful update, the "Update successful, a manual reboot....." message appears. Then, switch off the machine by pressing and holding the ON-OFF switch for longer (5 seconds) until the machine switches off.

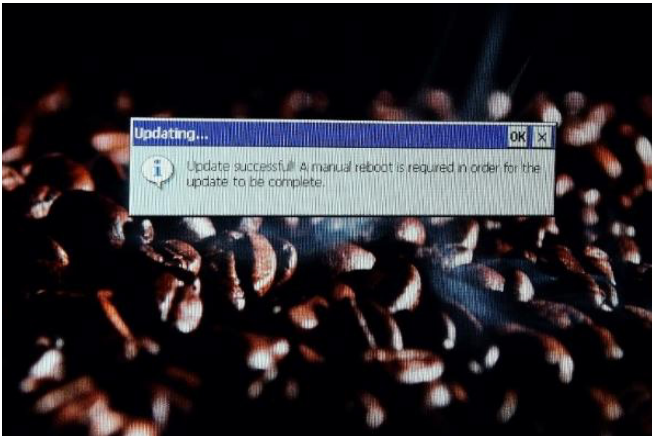

NOTE

Since the machine does not automatically continue the boot process after the BSP update, it is necessary to switch off the machine by pressing and holding the on-off switch or disconnecting it from the power supply.

9. Unplug the USB stick.
10. Switch on the machine.

TECHNICIAN INFORMATION

If the folder is located on the USB stick and the stick is plugged into the machine, the automatic operating system update starts again during every booting process. This means that, for example, after a machine software update – since an automatic boot process is carried out here – the BSP update routine would start if the USB stick was still in the machine at that time.

Alternatively, there are two further options

1. Cancel the BSP update in step 6 with "NO".
2. Save the folder with the BSP version separate from the machine software on a separate USB stick and only use it for BSP updates in the future.