

Service Memo

2019-012

Machine: Barista One / Schaerer Coffee Prime
Titel: Advice how to exchange boiler

Dear All,

Hereby I want to inform you what the best way of working is by exchanging boilers in the Barista One / Schaerer Coffee Prime.

There are 2 ways of working:


- A: machine is still working
- B: machine is out of order

Way of working A machine is still working:

1. Go into the menu for service technician
2. Step to: set up; service; start drainage
3. Follow the steps on the screen, as soon as drainage is done take out the power plug of the machine from the wall socket and change the boiler(s)
4. After changing the boiler put in the power plug of the machine into the wall socket and follow the steps in the screen.
Machine will make a commissioning and fill up the boiler(s).
5. Ready.

Way of working B machine is out of order:

1. Check if the power plug of the machine is out the wall socket.
2. Exchange the boiler(s)
3. Don't connect the wires on the solid state relays in the back of the machine so the machine can't heat up when switched on, see picture below:

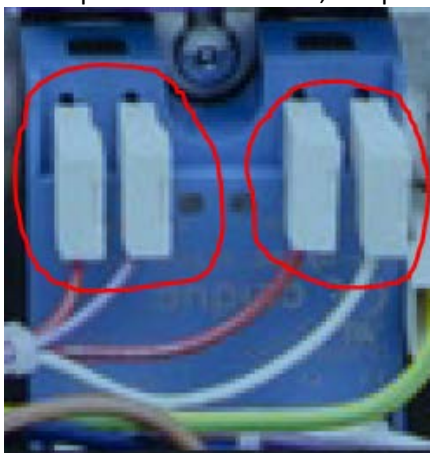

4. Put the power plug of the machine into the wall socket.
5. As soon as the boiler is filled up take out the power plug of the machine from the wall socket and connect the wires which are not connected in point 3.
6. Put the power plug of the machine into the wall socket.
7. Ready