

T.I. no.: 2018 - 22 Updated: -	Topic: Best Foam blender retrofitting set
---	--

Date: 10.09.2018
Affected machines: SCA P BF
From serial number: -
As of date: -

Priority	
	High
X	Medium
	Low

Need for action	
	As soon as possible
	On next visit to the machine
X	FYI only

BEST FOAM BLENDER RETROFITTING SET

For the Best Foam blender, there is a maintenance set (075142) consisting of the blender cover including O-ring, silicon hose, hose nozzle and a plain bearing.

Schaerer AG recommends replacing the blender cover including plain bearing during the next service.



Follow the steps which are necessary for conversion.

Installation of the retrofitting set (from S.N. 1806..../)


The following steps show the installation of the maintenance set for the blender for machines which already have the new blender and the new hoses installed.

- ▶ Disassemble the cover including the bean hopper.
- ▶ Disassemble front housing.


Caution!

Be careful with the display cables. The cables can get ripped out if pulled too hard.


- ▶ Remove cables from the guide and carefully put down the front housing.

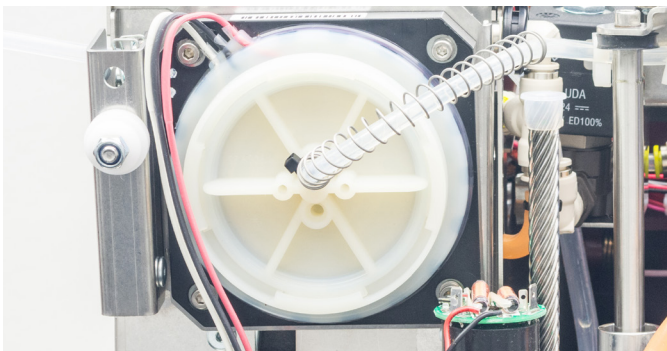

- ▶ Pull the hose from the blender cover.

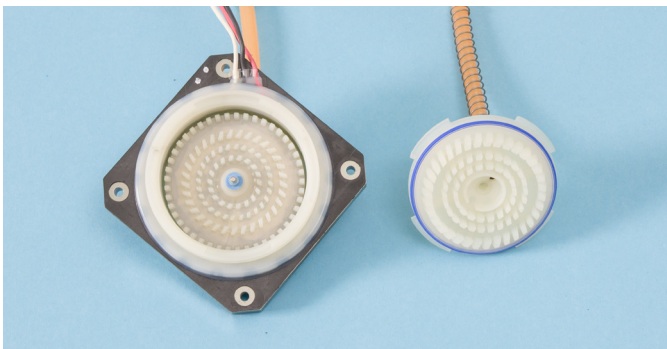

- ▶ Disassemble the blender cover. (Do not remove the complete blender! The blender is only removed to simplify the illustration.)
- ▶ Replace the old bearing (blue) with the new bearing (brown).
- ▶ Grease the O-ring of the new blender cover with food-grade grease.

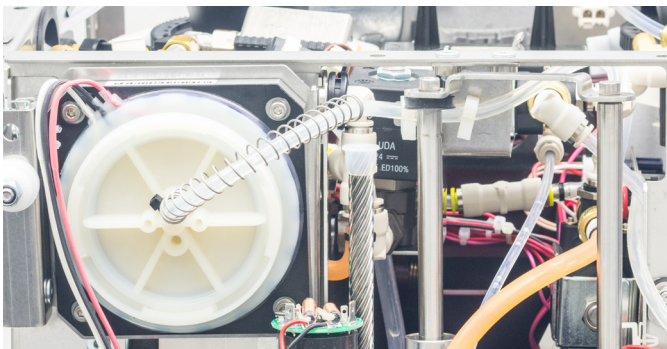

- ▶ Position the new blender cover and fasten it.
- ▶ Reconnect the hose.
- ▶ Reinsert the cables into the guide.
- ▶ Install the housing and cover.

Installation of the retrofitting set (before S.N. 1806..../)


The following steps show the installation of the maintenance set for the blender for machines which still have the old blender and the old hoses installed. In this case, the transparent orange hose (074546) should be replaced by the new transparent hose (063123) contained in the set.

- ▶ Disassemble the cover including the bean hopper.
- ▶ Disassemble front housing.


Caution!

Be careful with the display cables. The cables can get ripped out if pulled too hard.


- ▶ Remove cables from the guide and carefully put down the front housing.

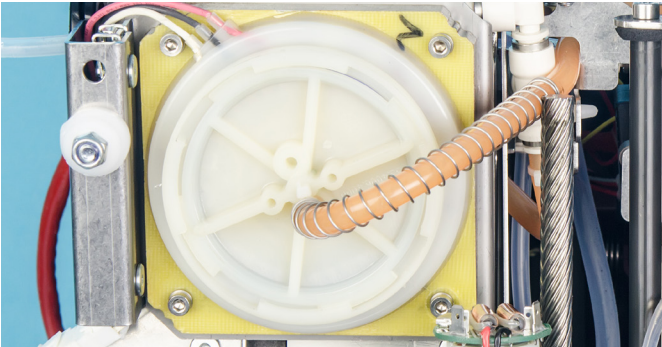


- ▶ Pull the hose from the blender cover.

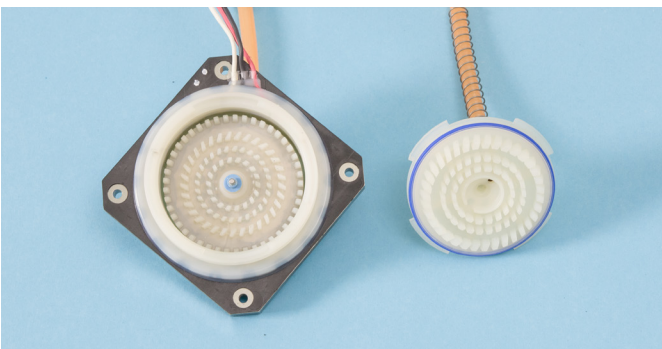

- ▶ Disassemble the blender cover. (Do not remove the complete blender! The blender is only removed to simplify the illustration.)
- ▶ Replace the old bearing (blue) with the new bearing (brown).
- ▶ Grease the O-ring of the new blender cover with food-grade grease.
- ▶ Position the new blender cover and fasten it.
- ▶ Reconnect the hose.

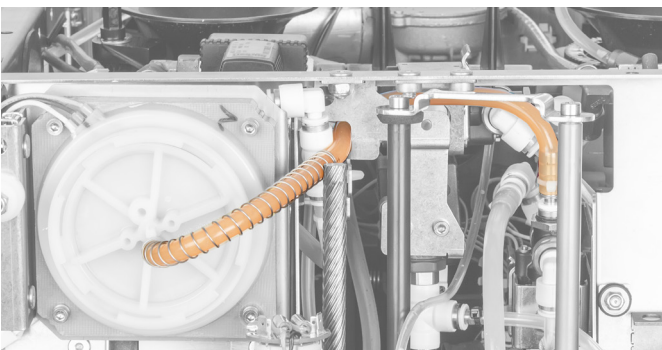

- ▶ Remove the orange hose.

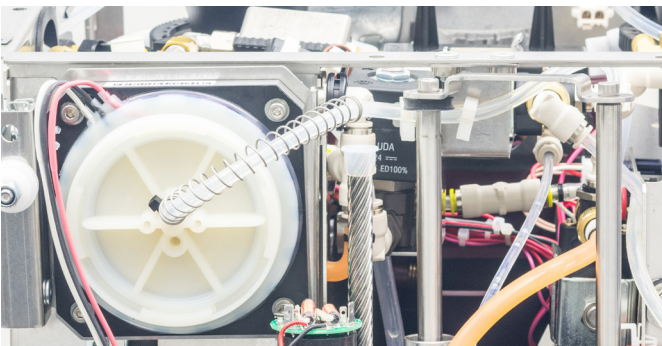

- ▶ Insert the new hose and connect to the blender cover.
- ▶ Reinsert the cables into the guide.
- ▶ Install the housing and cover.